




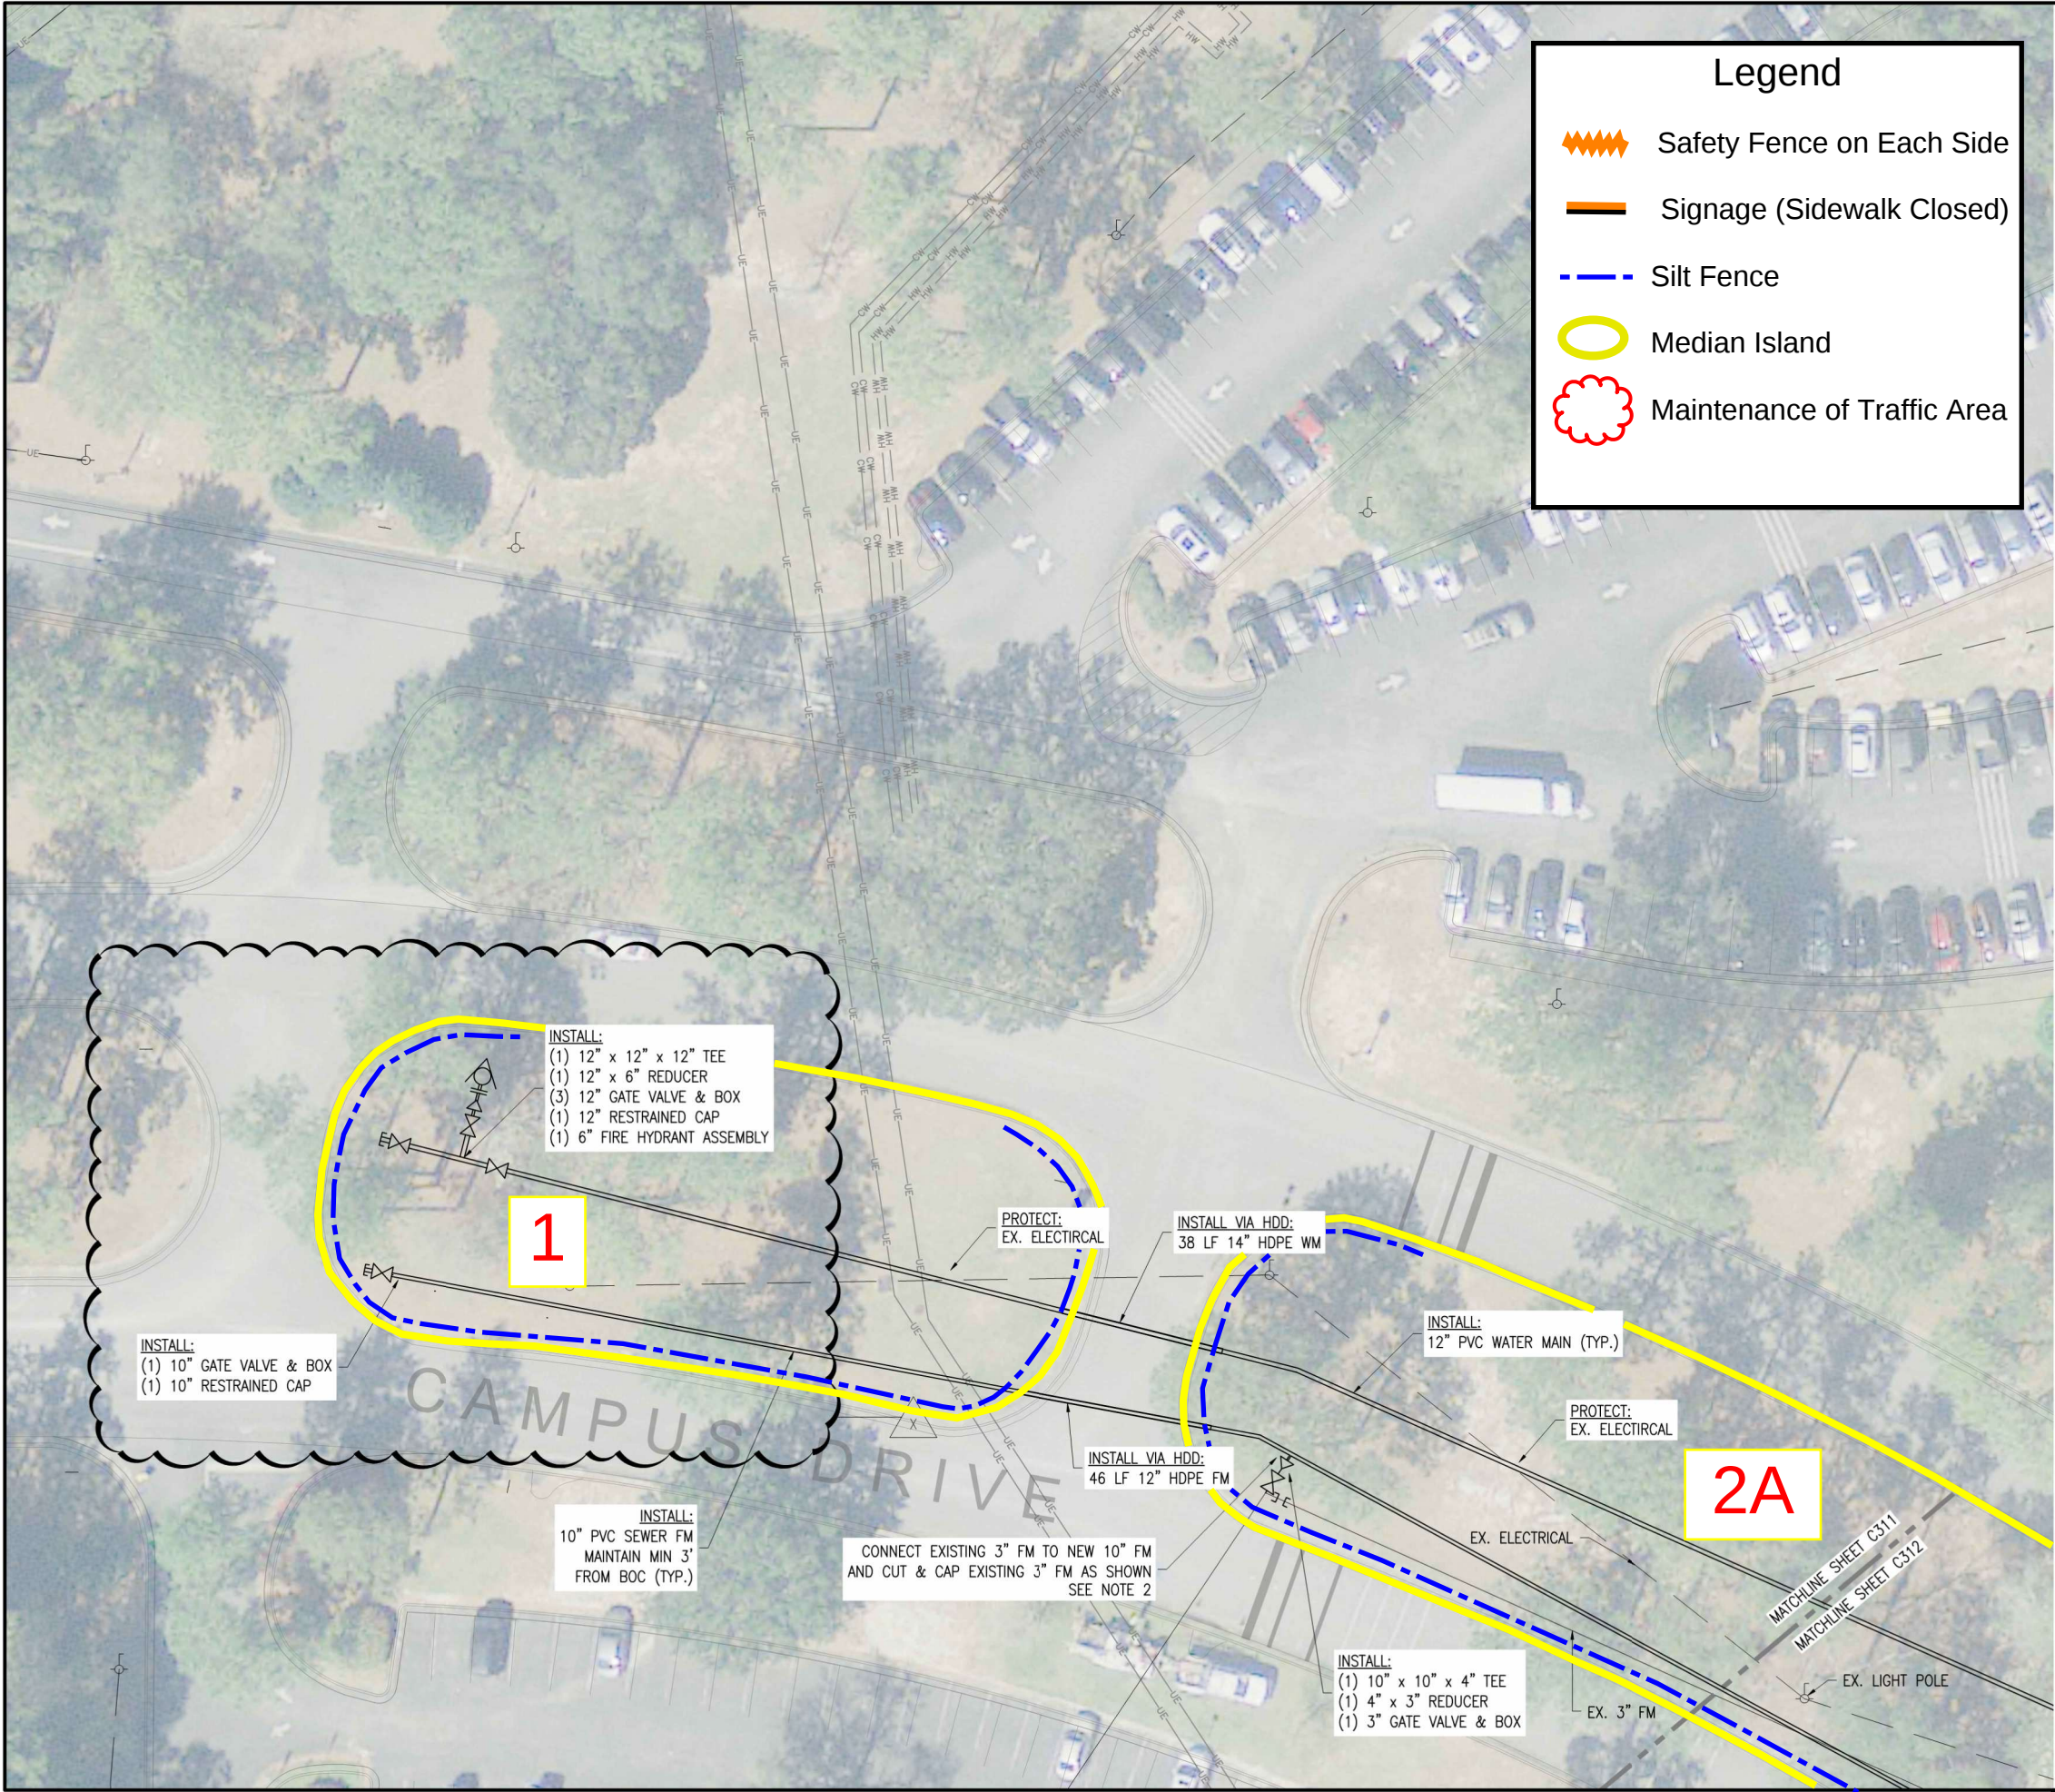

Offsite Utility Work Site Utilization and SWPPP Plan

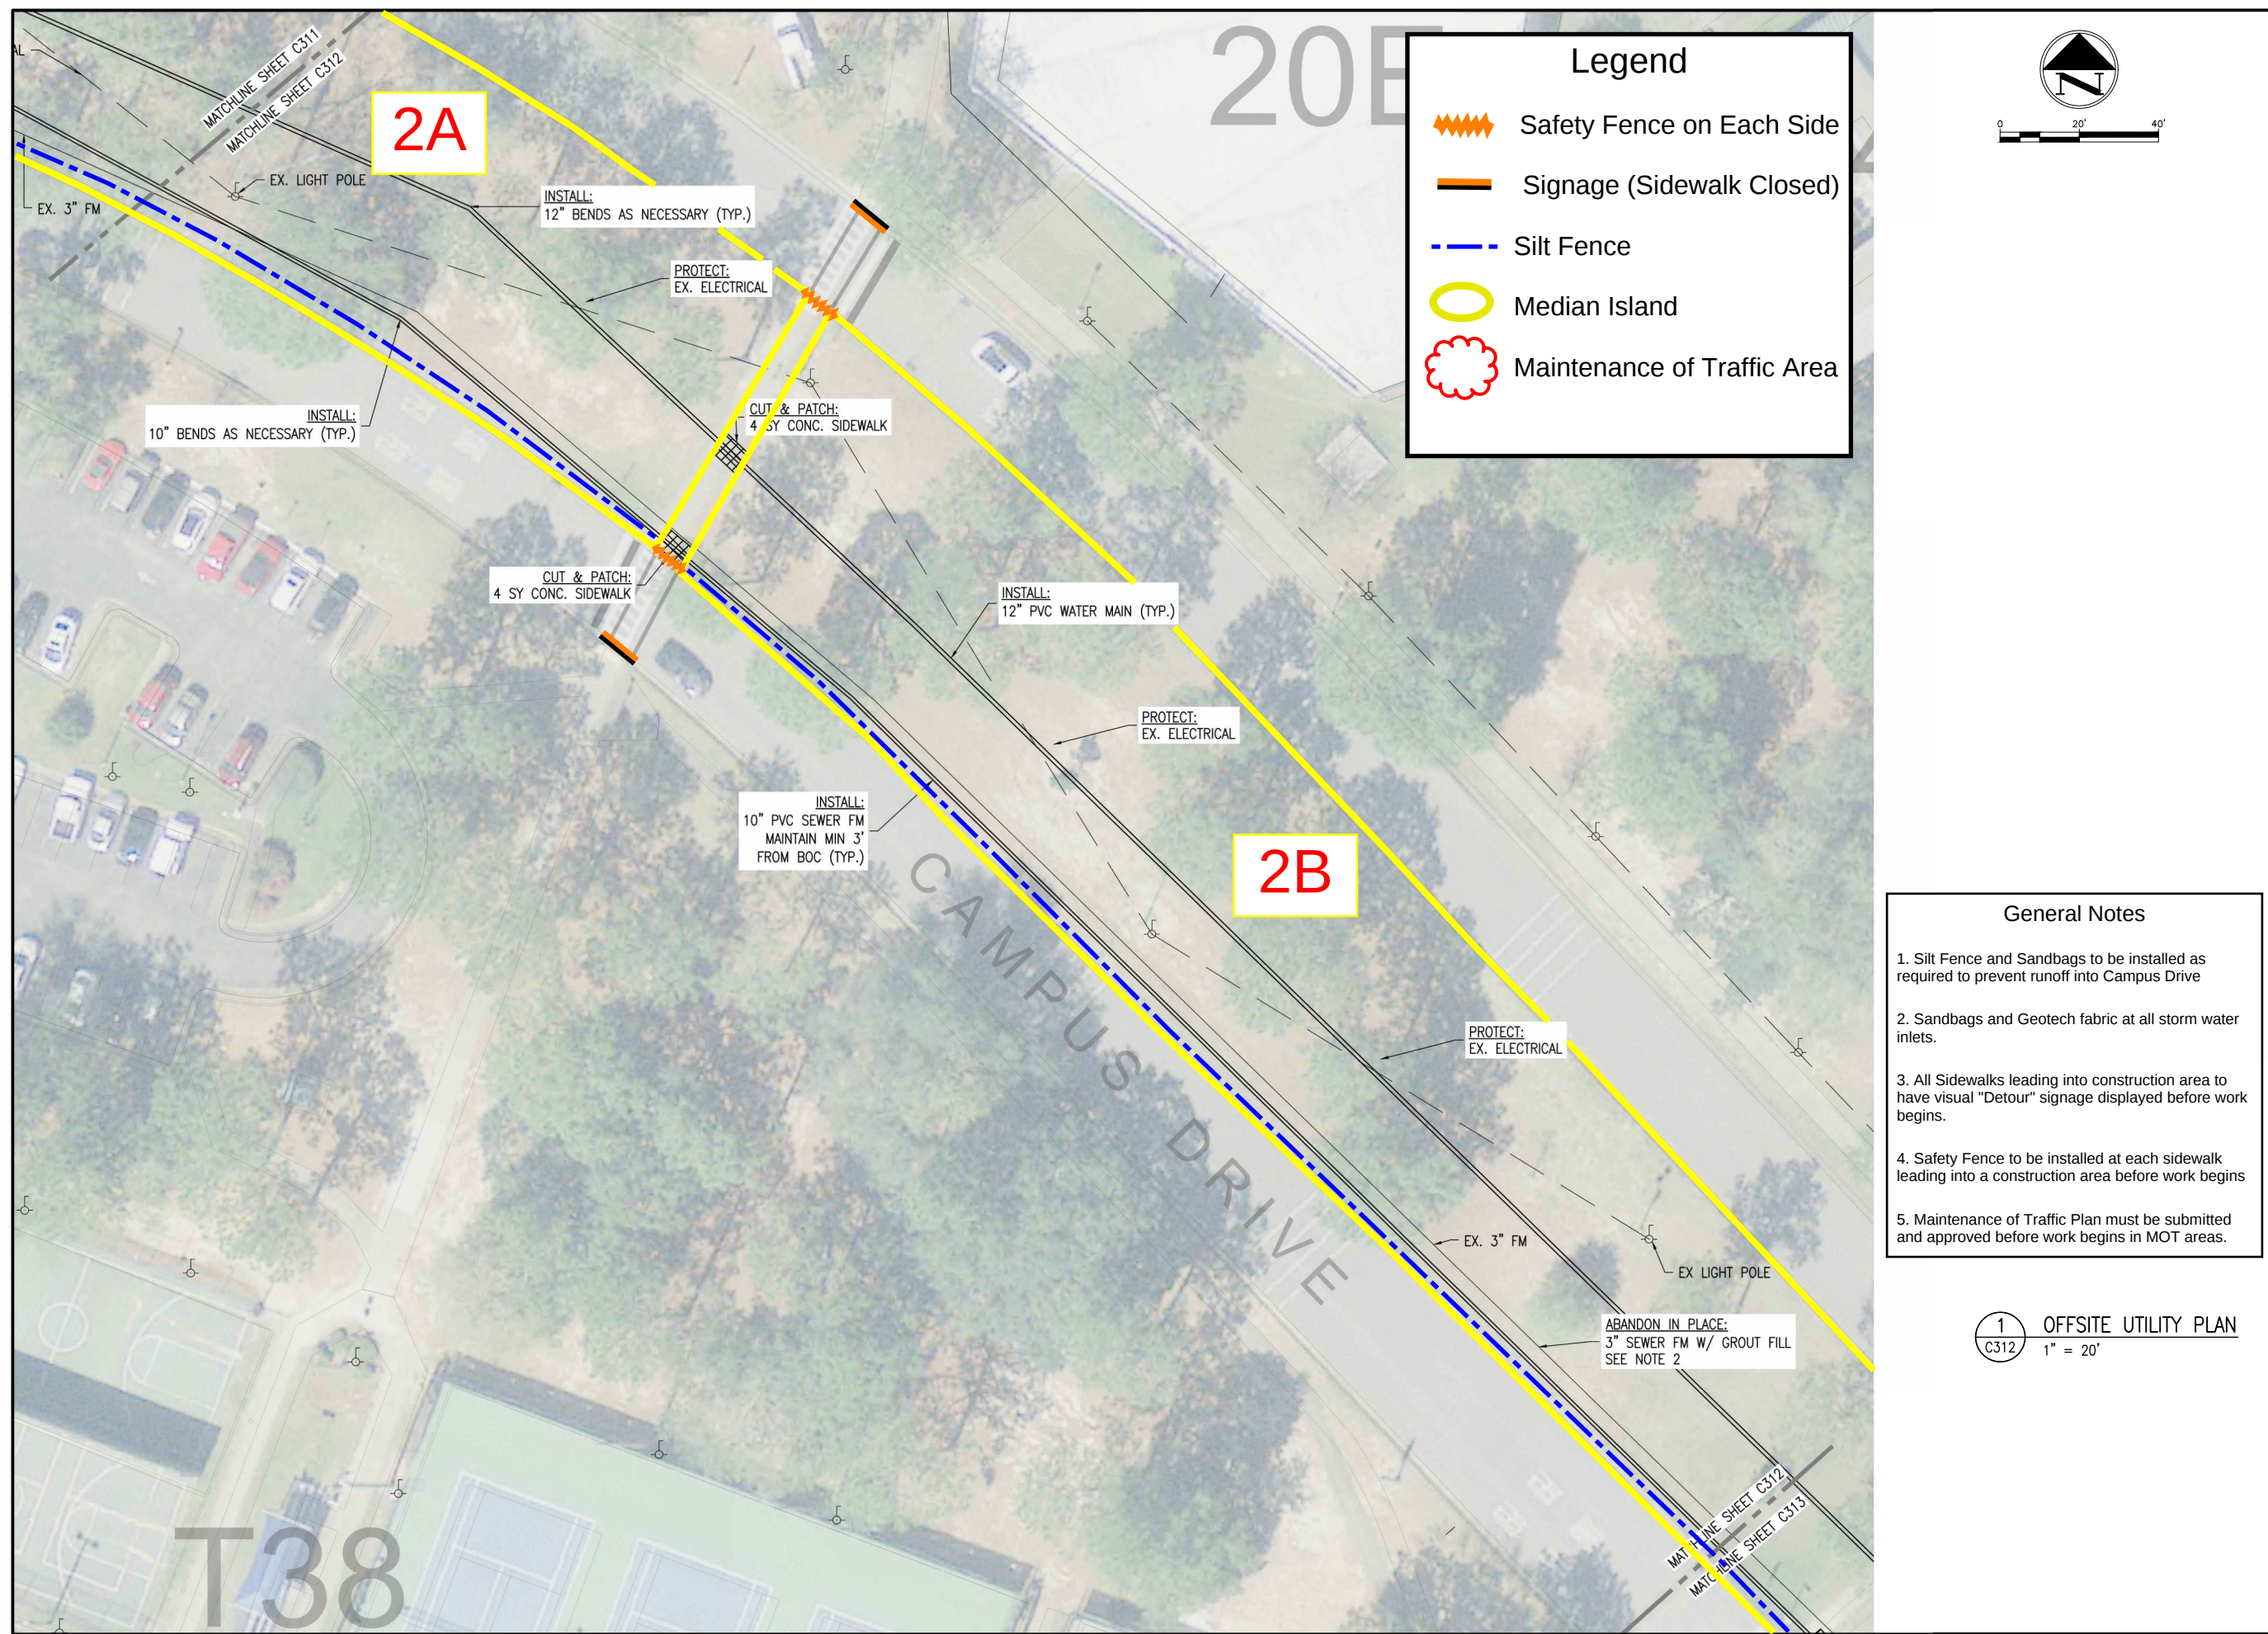


Offsite Utility Work Site Utilization and SWPPP Plan

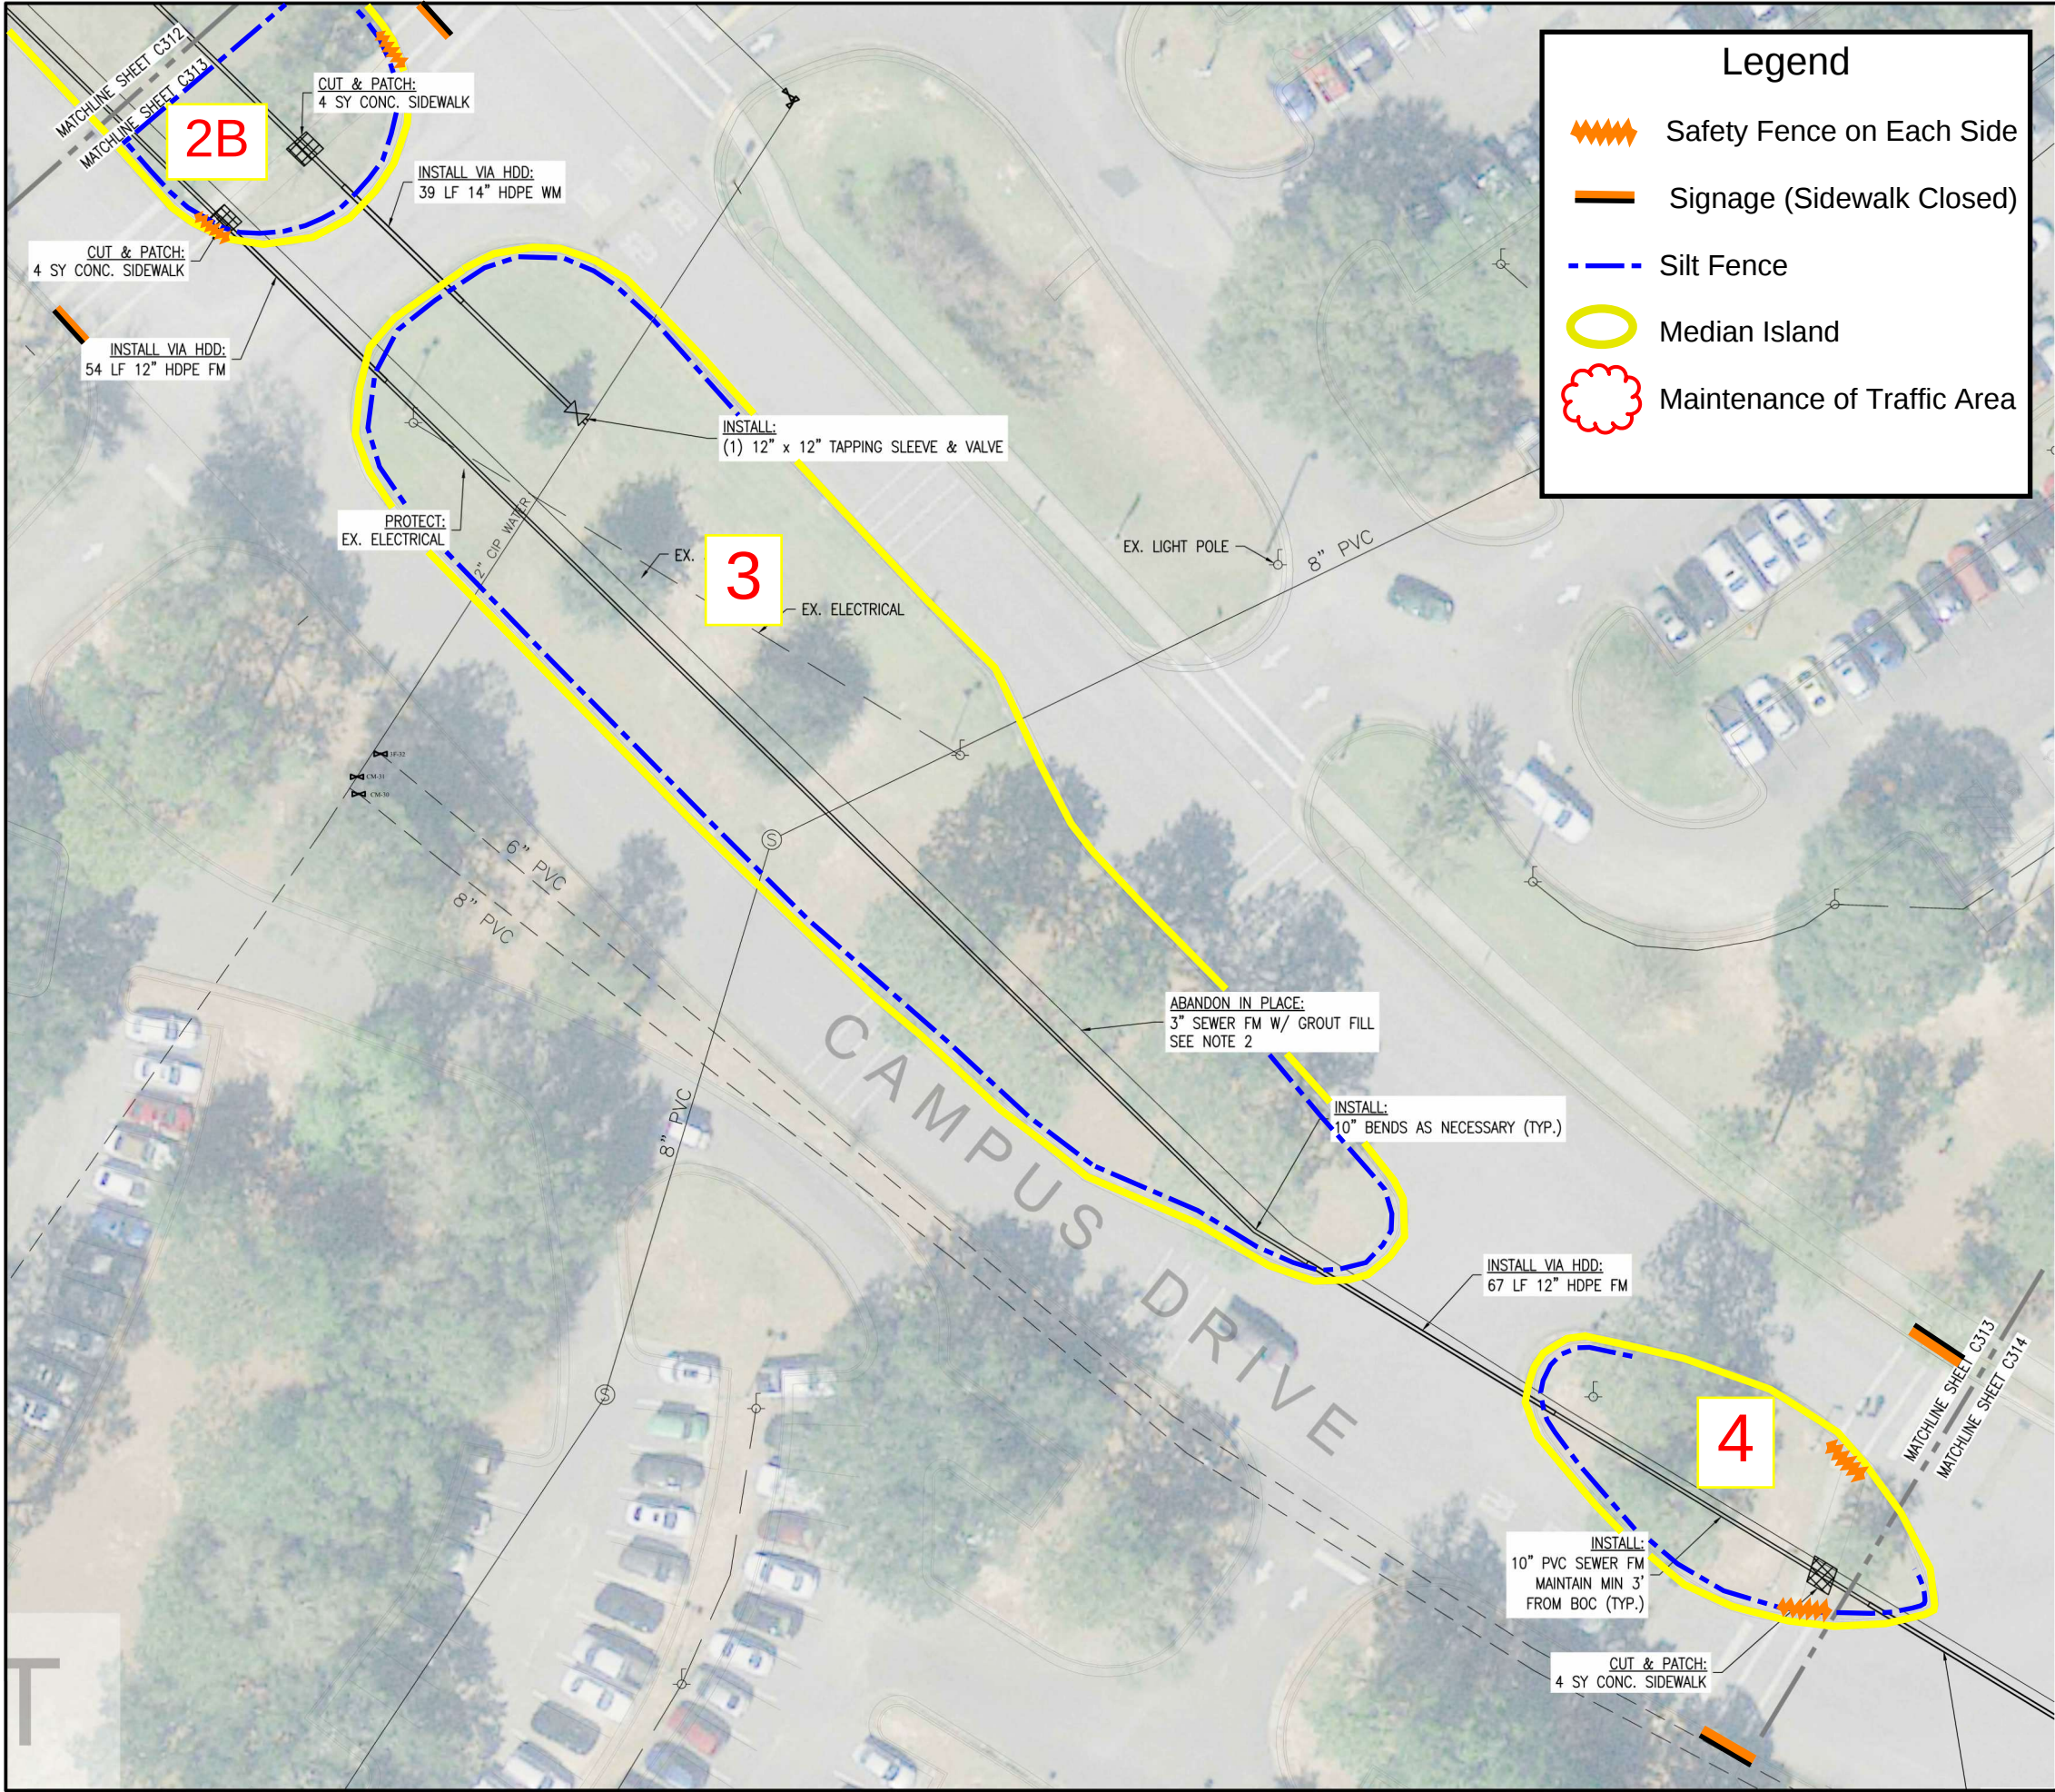

Legend

- Safety Fence on Each Side
- Signage (Sidewalk Closed)
- Silt Fence
- Median Island
- Maintenance of Traffic Area

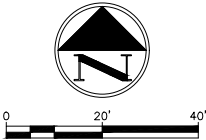


General Notes

1. Silt Fence and Sandbags to be installed as required to prevent runoff into Campus Drive
2. Sandbags and Geotech fabric at all storm water inlets.
3. All Sidewalks leading into construction area to have visual "Detour" signage displayed before work begins.
4. Safety Fence to be installed at each sidewalk leading into a construction area before work begins
5. Maintenance of Traffic Plan must be submitted and approved before work begins in MOT areas.

1 OFFSITE UTILITY PLAN
C313 1" = 20'

Offsite Utility Work Site Utilization and SWPPP Plan

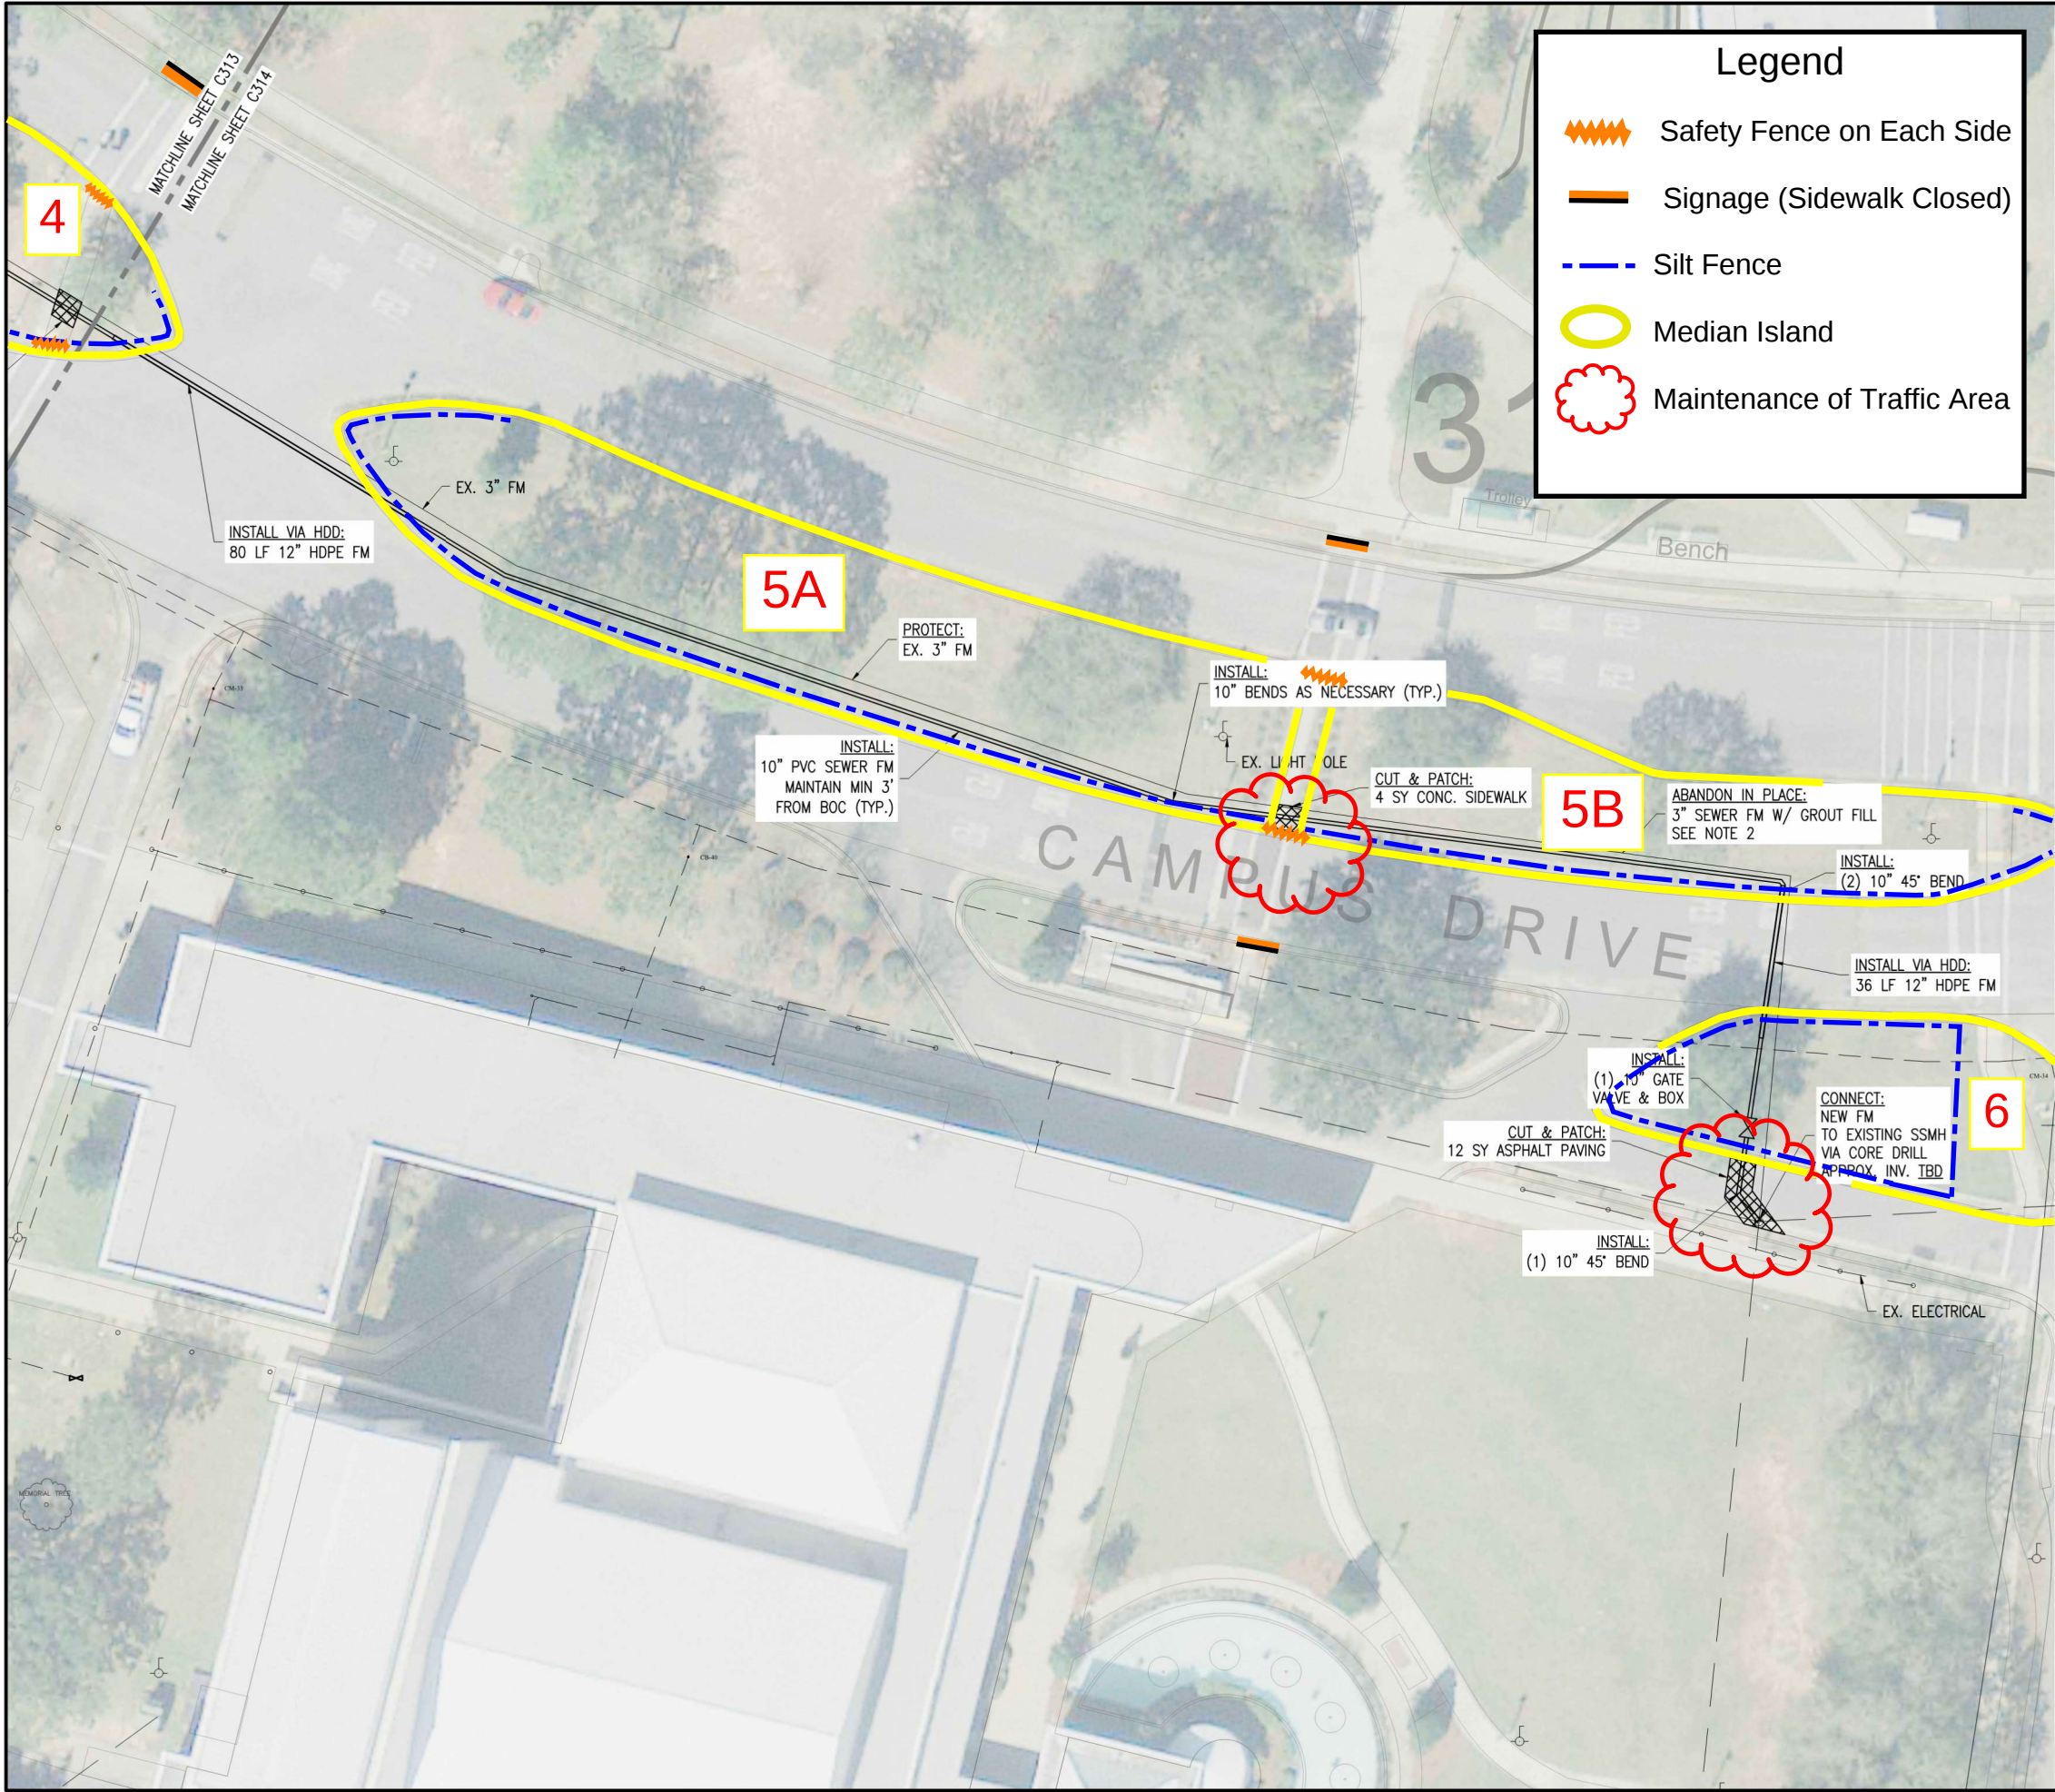

- General Notes**
1. Silt Fence and Sandbags to be installed as required to prevent runoff into Campus Drive
 2. Sandbags and Geotech fabric at all storm water inlets.
 3. All Sidewalks leading into construction area to have visual "Detour" signage displayed before work begins.
 4. Safety Fence to be installed at each sidewalk leading into a construction area before work begins
 5. Maintenance of Traffic Plan must be submitted and approved before work begins in MOT areas.

1 OFFSITE UTILITY PLAN
C314 1" = 20'